# Cleaning instructions WMF 1200 S Easy Milk

Please refer to the User Manual.

Follow the overview of the cleaning interval schedule in the Care chapter in the User Manual.

Prior to the first cleaning, read the User Manual, Care chapter.






For all automatic cleaning programs, the combi spout, the milk nozzle, and the milk hose must be installed.



### Call up the care programs


Access a care program without a message having appeared on the display. \* Touch 🕾



Care pad

\* Touch + until the desired program is displayed

# **Cleaning programs**

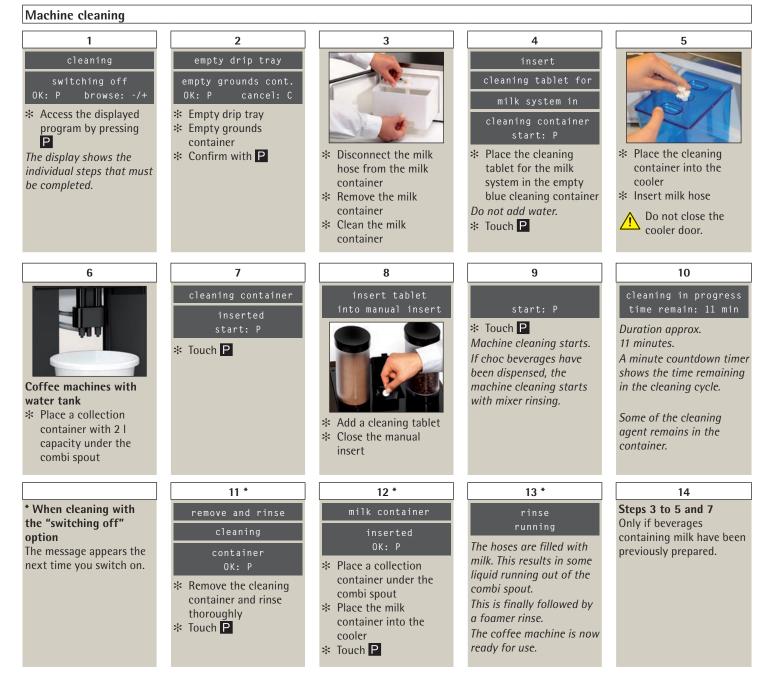

#### Milk system cleaning

1   milk system cleaning   0K: P browse: -/+   * Access the displayed   program by pressing   P   The display shows the   individual steps that must   be completed.	2 * Disconnect the milk hose from the milk container * Remove the milk container * Clean the milk container	3 insert cleaning tablet for milk system in cleaning container start: P * Place the cleaning tablet for the milk system in the empty blue cleaning container Do not add water. * Touch P	4   Image: Second system   *   Place the cleaning container into the cooler   *   Insert milk hose   Image: Second system   Image: Do not close the cooler door.	5 Coffee machines with water tank * Place a collection container with 2 I capacity under the combi spout
6 cleaning container inserted start: P * Touch ₽ Cleaning begins.	7 cleaning in progress time remain: 5 min Duration approx. 5 minutes. A minute countdown timer shows the time remaining in the cleaning cycle.	8 remove and rinse cleaning container OK: P Some of the cleaning agent remains in the container. * Remove the cleaning container and rinse thoroughly	9 milk container inserted OK: P * Place a collection container under the combi spout * Place the milk container into the cooler * Touch P	10 rinse running The hoses are filled with milk. This results in some liquid running out of the combi spout. This is finally followed by a foamer rinse. The coffee machine is now ready for use.
Mixer rinsing				
1 mixer rinsing OK: P browse: -/+ * Access the displayed program by pressing P	2 mixer rinsing start: P cancel: C * Touch P Mixer rinsing starts.	<b>3</b> your selection pls 08:15 09.01.2013 After the mixer is rinsed, the "Ready to operate" display appears.	Cleaning tablets for the coffee machine Order number 33 2332 4000 Special cleaning tablets for the WMF milk system Order number 33 2622 0000	


# Manual combi spout cleaning



Caution. Carefully disconnect the milk hose

- \* Carefully disconnect the milk hose
- Place the aperture on the milk hose.

Prior to cleaning switch off using the ON/OFF button. Disconnect mains plug.

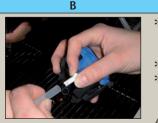

- \* Dissolve one cleaning tablet for the milk system in a container with 0.5 litres of warm water
- \* Dismantle combi spout
- \* Place all parts of combi spout and mixer hose in the cleaning solution (combi spout in 3 parts)

All parts must be completely immersed in the cleaning solution.



thoroughly with a brush \* Rinse all parts very thoroughly with clean water If a mixer is fitted:

\* After 5 hours, clean all the parts

\* Rinse mixer hose very thoroughly



- \* Reassemble combi spout \* Replace combi spout \* Insert milk hose
- *If a mixer is fitted:* \* Insert mixer hose



# Manual combi spout cleaning

Foamer rinsing active: perform once per week (standard setting is active)

Foamer rinsing inactive : perform once per day